## **New** product

# **ELFTM Single Phase Series**

Fast transfer emergency lighting inverter system 1000VA – 2800VA



## Features

- 98% efficient at full load
- 2ms transfer time
- PWM/IGBT technology
- Self-testing/self-diagnostic
- User programmable with password protection
- Standard input circuit breaker
- Standard output circuit breaker
- Micro-processor controlled
- Floor or wall mountable
- 30 min. standard run time
- Compatible with all lighting loads LED and HID
- Automatic event, test and alarm log
- Small footprint
- Maintenance-free standard batteries
- Forced air cooling during emergency mode only
- cUL Listed to CSA 22.2.141-15. Meets NFPA101



## ELFTM Series 30 minute run time

	_	_			Cabinet dim	nensions (cm)	Batteries		Total	
Partial model number	Power rating (kW) 30 min.	Voltage in-out VAC	W (cm)	H (cm)	D (cm)	Weight (kg)	No. of batteries	Weight (kg)	system weight (kg)	Total no. of cabinets
1	1.00	120 or 277	62-	70	27—	55	4	42-	97	1
1	1.00	347	62	110		90			132	1
2	1.60	120 or 277	62-	110	27	75	6	63-	138	1
2		347		140		108			171	1
2	2.20	120 or 277 347	62	110	27	78	78 108 8	84	162	1
3	2.20		62—	140	27—	108			192	1
4	2.80-	2.80 120 or 277 347	62—	140	27—	92	10	105	197	1
4				180		127		105-	233	1

### ELFTM Series 60, 90 & 120 minute run time

	Power rating (kW)			Cabinet dimensions (cm)					Batteries	Total											
Partial model number	60 min.	90 min.	120 min.	Voltage in-out VAC	W (cm)	H (cm)	D (cm)	Weight (kg)	No. of batteries	Weight (kg)	system weight (kg)	Total no. of cabinets									
4	1.00	0.90	0.80	120 or 277	62	70	27—	55	4	66-	121	1									
1	1.00			347	62	110	21	90			156	1									
2	1.00	1 4 4	1.28	120 or 277	62	110	27	75	6	99	174	1									
2	1.60 1.	1.44	1.20	347	62	140	27	108			207	1									
2	2 20	1 0 0 1 7 0	100 17	1.0.0	1 0.0	1 0 0	1 0 0	1.00	1 0 0	1.98	00 170	98 1.76	120 or 277	62	110	27	78	0	122	210	1
3	2.20	1.98	1.76	347	62	140	27	108	8	132	240	1									
4	2.80	2.52 2.24	80 2.52 2.24	2.52 2.2	-2 - 2 - 4	52 2 24	120 or 277	62	140	27	92	10	1.05	257	1						
4		2.80			2.52 2	2.52	2.52	.52 2.24	347	62	180	27——	127	10	165	293	1				

# **ELFTM Single Phase Series**

System specifications

## System specifications

**Electrical input** 

Input power walk-in

Harmonic distortion <10%

Input frequency

Protection

Power factor

Voltage

General	
Design	PWM inverter type utilizing IGBT technology with 2ms transfer time
Control	Microprocessor controlled, 4 x 20-character display with touch pad controls & functions Continuous scrolling display of system status and faults, with alarm feature
Metering	Input and output voltage, battery voltage, battery and system output current, output VA, temperature, inverter wattage
Communication	Optional RS-232 port (DB9)

120, 208, 240, 277 or 347VAC

Standard input circuit breaker

60Hz, +/-3Hz


0.5 lag/lead

Limiting inrush current to less than 125%,

10 times 1 line cycle for incandescent loads

Environmental c	onarcions
Storage/transport	<ul> <li>-4°F to 158°F (-20°C to 70°C) without batteries</li> <li>-0°F to 104°F (-18°C to 40°C) with batteries max. 3 months at 104° F (40°C)</li> </ul>
Operating temperature	System operates safely from 32°F to 104°F (0°C to 40°C) UL924 listed to provided 30, 60, 90 and 120 mins of battery back up between 68° F and 86°F (20°C to 30°C). Battery performance can be affected by temperature
Altitude	<10,000 feet (above sea level) without de-rating
Relative humidity	0 to 95% non-condensing
Audible noise	45 dBA at 1m from surface in emergency mode

### Single line diagram - Normally on output circuit

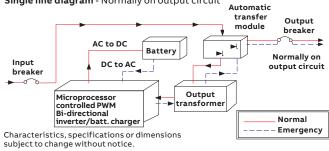

## subject to change without n ges ischarge +/-12.5%

Electrical output					
Voltage	120, 208, 240, 277 or 347VAC, 1-phase 2-wire Contact factory for all other voltages				
Static voltage	Load current change +/-2%, battery discharge +/-12.5%				
Dynamic voltage	+/-2% @ 25% load step change and				
	+/-3% 50% load step change, recovery within 3 cycles				
Harmonic distortion	<3% THD for linear load				
Output frequency	60Hz +/- 0.05Hz during emergency mode				
Load power factor	0.5 lag to 0.5 lead				
Overload capability	100% for continuous rating, 115% for 10 minutes, 150% for 16 line cycles				
Protection	Optional distribution circuit breaker				
Crest factor	3.8				



## **ELFTM Single Phase Series**

## System specifications and ordering information

### Cabinets

Single freestanding or wall mount NEMA Type 1 steel cabinets powder coated for corrosion and scratch resistance. Front access design. Top and left side conduit entry with knockouts.

#### Inverter

Using IGBT/PWM technology the inverter converts the DC voltage supplied by the batteries to AC voltage of a precise stabilized amplitude and frequency, suitable for most sophisticated electrical equipment. True sinusoidal output waveform with very low distortion (less than 3% for linear loads). Overload capability of up to 150% for 16 line cycles.

### Charger

Fully automatic, temperature compensated, microprocessor controlled charger recharges fully discharged batteries in maximum 24 hours at nominal AC input voltage. AC input current limiting and over-voltage protection included.

#### Battery

System is provided with 10 year, maintenance free, sealed valve regulated lead calcium batteries. 30 min. standard discharge time at full load under normal operating temperature. Low voltage disconnect protection included. No special ventilation required.

### Self-diagnostic

Automatic self-test consists of a 5-minute monthly and full run time annual function. The front-mounted control panel includes a 4-line 20-character OLED display and a keypad to control and monitor the internal operation of the system. This allows the operator to easily

Nominal

D - ++ - ----

"watch" system functions as they occur and check on virtually any aspect of the system's operation. Self-diagnostic function monitors, controls, generates alarms and memorizes events.

### Alarms

High battery charger voltage, high/low AC input voltage, near low battery voltage, low battery voltage, load reduction fault, output overload, high ambient temperature, inverter fault, output fault, system test failure, optional output circuit breaker trip, charger fault, output overload shutdown.

## **Optional features**

Normally off output, output circuit breakers, output trip alarm, RS232 communication port, remote summary alarm panel, summary alarm dry form C contact, status monitoring dry form C contacts, remote status panel, inverter on dry contacts, time delay, load control interface for dimmer and switch bypass in emergency, wall mount bracket, circuit breaker lock, drip top (NEMA2), internal/external maintenance bypass switch, output transfer delay, serial to ethernet adapter, battery strapping, zone monitoring, floor mount bracket, seismic mounting, BACnet IP or MS/TP, Modbus TCP/IP or RTU.

### Factory start-up

Output breaker

Includes one additional year of warranty. See warranty conditions

Warranty (full limited warranty conditions available upon request)

Limited manufacturer warranty is one-year, parts and labor, for system electronics or two-year with factory start-up program. Battery warranty is one year full plus 9 years pro-rata for a total of 10 years, under normal operating conditions. System must be put in service within 180 days from ship date in order to validate warranty.

Output breaker Output breaker Output breake

Input/output voltage	Series	Nominal capacity	Battery type	Emergency run time	Output breaker configuration	Output breaker voltage	Output breaker amperage	Output breaker qty.	
1= 120-120 2= 120-120/277 <sup>1</sup> 3= 208-120 <sup>1</sup> 4= 240-120/240 <sup>1</sup> 5= 277-120 <sup>1</sup> 6= 277-277 7= 277-277/120 <sup>1</sup> 8= 208-120/240 <sup>1</sup>	ELFTM	1= 1000VA 2= 1600VA 3= 2200VA 4= 2800VA	<b>S</b> = Standard	<b>R30</b> = 30 min. <b>R60</b> = 60 min. <b>R90</b> = 90 min. <b>R120</b> = 120 min.	B= Normally ON N= Normally OFF <sup>2</sup>	A= 120 B= 208 C= 240 D= 277 Z= 347	10= 10 Amp 16= 16 Amp 20= 20 Amp 25= 25 Amp 32= 32 Amp	01-10= Choose the number of output breakers between 01 and 10 <sup>3</sup>	
9= 208-120/208 <sup>1</sup> 10= 347-347 <sup>1</sup> <sup>1</sup> Enclosure height will increase. Contact factory.					<sup>2</sup> Normally off loads cannot exceed 20% of total KVA rating with any combination of HID loads				
Options				Monitoring	Mounting	Warranty (one y	Accessories		
<ul> <li>A= Remote summary alarm panel</li> <li>BL= Circuit breaker lock(s)</li> <li>C= Status monitoring dry form C contacts alarm panel</li> <li>D= Drip top (NEMA 2)</li> <li>I= Inverter on dry form C contact</li> <li>L= Load control relay (contact factory for load control applications)</li> <li>M= Maintenance bypass (MBB)</li> <li>M(BBM)= Internal maintenance bypass</li> <li>O= Output transfer delay(factory set at 3 seconds adjustable 0 to 7.5 seconds)</li> <li>P= Remote status panel (requires "C" option – status monitoring dry form C contacts</li> <li>S= Summary fault form C contacts</li> <li>T= Ouput trip (supervised) alarm<sup>2</sup></li> <li>V= Time delay 15 minutes (15 minute retransfer time delay of normally off circuit after return of utility)</li> </ul>				BAC= BACnet communication (MSTP) MOD= Modbus RTU BIP= BACnet IP MIP= Modbus TCP/IP SEA= Serial to ethernet adapter	Blank= Standard wall F= Floor mount bracket (adds 4" to total system height) W= Wall mount Brackets Z= Seismic/raised floor (adds 4" to total system height)	<ul> <li>2YW= Start up &amp; same day training</li> <li>2YT= Startup, same day training and full run test<sup>5</sup></li> <li>5YP= 5-year preventative maintenance plan (startup included)</li> <li>5YW= 5-year extended electronics warranty</li> <li>TR= Training if required on day other than startup</li> </ul>		Blank= No accessories EMBP= External maintenance bypass switch <sup>6</sup> SPARES= Spare fuses & circuit boards SPAREF= Spare fuse kit	
Y= Battery strapping ZM= Zone monitoring (quantity must be specified) Example: 1ELFTM1SR30BA1602BLBAC						⁵Load must be con additional day on-		<sup>6</sup> Cannot be purchased with internal output breaker option	

<sup>3</sup>Unless output circuit breakers are specified, a single output breaker will be supplied with each unit and the current rating will vary based on the output power and voltage rating of the unit. Maximum specified output breakers available: 10 unsupervised (1-pole), 6 supervised (1-pole). A 2-pole breaker occupies 2 positions.

# **EXEMERGI-LITE**<sup>®</sup>